


You can open up to four "Normal" display windows.
 The Normal display window shows traces in the time/distance plane.

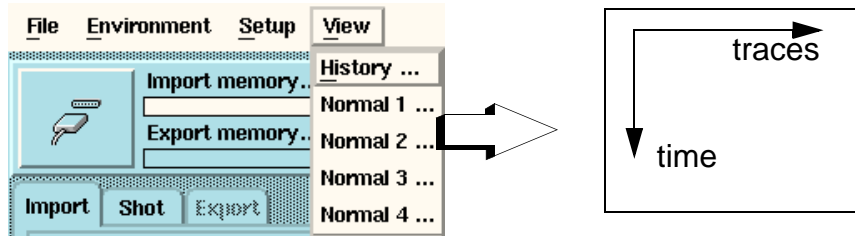

The screenshot shows the 'SQC - PRO : Normal 1 : 1' window. At the top, it displays 'File# 2385 Shot Points# 5073, 3110, 1' and 'Faulty traces: 42 / 1152 (7.1%) Successive: 6 (0.5%)'. The main plot area shows seismic traces with a 'Horizon' line. Annotations include:

- QC out of range**: Points to the 'QC' column in the left sidebar.
- Edited traces**: Points to the 'Traces' column in the left sidebar.
- Field QCs**: Points to the 'QC' column in the left sidebar.
- Acq. system errors**: Points to the 'Acq. system errors' column in the left sidebar.
- First Breaks**: Points to the 'First Breaks' column in the left sidebar.
- Receiver Type**: Points to the 'Receiver Type' column in the left sidebar.
- Horizon**: Points to the 'Horizon' column in the left sidebar.
- Information read from file Header block**: Points to the 'File# 2385 Shot Points# 5073, 3110, 1' text.
- Faulty trace indicator**: Points to the red diamond icon in the top status bar.
- Attributes graph**: Points to the yellow shaded area at the top of the plot.
- Receiver Line No.**: Points to the 'Receiver Line No.' column in the plot.
- Receiver Point No.**: Points to the 'Receiver Point No.' column in the plot.
- First Breaks**: Points to the 'First Breaks' column in the plot.
- Horizon**: Points to the 'Horizon' line in the plot.
- Auxiliary traces plot area**: Points to the left sidebar area.
- Seismic traces selection indicator**: Points to the 'All traces' button at the bottom left.
- Seismic traces plot area**: Points to the main plot area.